

All-in-Line



Benutzerhandbuch  
Instruction Book  
Mode d'emploi  
Manuale dell'utente

English

**AIL-2519S2DVD**  
**AIL-2622S2DVD**  
**AIL-2724S2DVD**

**enox.**  
enjoy electronics

---

# Contents

<b>SAFETY INFORMATION .....</b>	<b>3</b>
Headphone Warning .....	4
Where to install .....	4
LED Screen .....	4
<b>Unit and Accessories .....</b>	<b>5</b>
<b>Getting Started.....</b>	<b>5</b>
Front view .....	5
<b>Remote Control .....</b>	<b>6</b>
Remote control instructions in TV mode .....	6
Remote control instructions in DTV/USB mode .....	7
Remote control instructions in TELETEXT mode .....	8
Installing Batteries in the Remote Control .....	9
Using the Remote Control .....	9
<b>Aerial connection .....</b>	<b>9</b>
Connecting the TV Antenna .....	9
<b>Connecting external devices .....</b>	<b>9</b>
HDMI Lead .....	9
SCART Lead .....	9
VGA Cable .....	9
<b>CONNECTIONS .....</b>	<b>11</b>
PC connection.....	11
VGA, HDMI PC Connection .....	11
Satellite connection.....	11
Connecting an audio system .....	12
Connecting a DVD player .....	13
HDMI Connection.....	13
SCART Connection.....	13
USB Connection.....	13
AV Connection .....	14
YPbPr Connection.....	14
<b>Common Interface Slot.....</b>	<b>15</b>
USING YOUR COMMON INTERFACE SLOT .....	15
<b>Auto installation setup .....</b>	<b>15</b>
Power On / Off the LED TV .....	15
<b>TV SETTINGS Menu.....</b>	<b>16</b>
Signal Source .....	16
Auto Scan .....	16
PROGRAMME EDIT .....	18
Signal Information.....	18
CI Information .....	18
Power-Off-No-Signal-Down .....	18
Auto-Power-Down.....	18
Guide (EPG – Electronic Program Guide) .....	18
Favourite Lists.....	18
Dish Setup .....	18
<b>Menu Settings .....</b>	<b>23</b>
Picture menu .....	23
SOUND menu.....	24
EXTRAS menu.....	24
OPTIONS menu.....	24
LOCK menu.....	25

---

<b>Multimedia Operation.....</b>	<b>27</b>
Basic Operation .....	27
1. Photo .....	28
2. Music .....	28
3. Movie .....	28
4. Text .....	28
<b>Recording Operation.....</b>	<b>29</b>
PVR settings.....	29
<b>DVD Operation.....</b>	<b>31</b>
DVD Operation.....	31
<b>TROUBLE SHOOTING GUIDE .....</b>	<b>34</b>
<b>TECHNICAL SPECIFICATIONS .....</b>	<b>34</b>
TV Specifications .....	34
DVBS Specifications .....	34
<b>Wall Mounting .....</b>	<b>35</b>

---

## Introduction

Thank you for purchasing this LED TV which has been designed and manufactured to give you many years of trouble free service.

You may already be familiar with using a similar product but please take time to read these instructions which have been written to ensure you get the very best from your purchase.

## HDMI

HDMI (High Definition Multimedia Interface) is the next generation of digital interface. Unlike conventional connections, it transmits uncompressed digital and audio signals using a single cable. This TV supports high-definition video input via the HDMI socket on the back of the TV.

## Safety is important

To ensure your safety and the safety of others, please read the safety precautions BEFORE you operate this product.

## Disclaimer

The illustrations of the LCD-TV, accessories and menus shown in this User's Manual may differ from the actual product.

## SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS - READ CAREFULLY BEFORE USE.

Take note of the following safety information which appears on the back of the TV.



CAUTION: TO PREVENT ELECTRICAL SHOCK, DO NOT REMOVE ANY COVER SCREWS, NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This symbol indicates that there are important operating maintenance instructions in the literature accompanying this unit.



This symbol indicates that dangerous voltage constituting a risk of electric shock is present within this unit.

Keep these instructions

- Do not use this TV near water.
- Clean only with a slightly damp cloth.
- Do not block any ventilation openings.
- Install in accordance with the supplied Quick Start Guide and this User Guide.
- Protect the power chord from being walked on or pinched, particularly at plugs, and the point where it exits from the TV.
- Do not allow the power chord to overhang the edge of a table.
- Unplug this TV during lightening storms or when unused for long periods of time.



WARNING! TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS TV TO RAIN OR MOISTURE. THE TV MUST NOT BE EXPOSED TO DRIPPING AND SPLASHING AND NO OBJECTS FILLED WITH LIQUIDS SHOULD BE PLACED ON THE TV.

NOTE: No naked flames such as candles should be placed on the TV.

NOTE: When displaying the same still picture for more than 2 hours without any interruption, the picture contours of the continuously displayed contents may remain visible on screen, i.e. a persistent image remains. The same applies, when displaying for more than 2 hours:

- the same background/wallpaper
- logos, video games, computer images, Teletext
- contents with a non-filling aspect ratio (e.g. 4:3 format)

These do not represent any malfunction and will not be covered by the manufacturer's warranty

---

This unit has been produced according to all current safety regulations. The following safety tips should safeguard users against careless use and the dangers connected with such use.

- Although this appliance has been carefully manufactured and rigorously checked prior leaving the factory, as with all electrical appliances it is possible for problems to develop. If you notice smoke, an excessive build up of heat or any other unexpected phenomena, you should disconnect the plug from the mains power socket immediately.
- Ensure that the unit is sufficiently ventilated! Never place next to or underneath curtains!
- The mains plug or appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- This set should only be connected to a mains power supply which matches that stated on the label on the rear of the TV - do not attempt to connect it to any other type of supply.
- The socket - outlet must be installed near the equipment and easily accessible.
- To prevent overload, don't share the same mains supply socket with too many other items of equipment.
- Apparatus with Class 1 construction shall be connected to a mains socket outlet with a protective earth connection.
- Keep away from rodents. Rodents enjoy biting into electric flexes.
- Always hold the plug when pulling out the plug from the mains supply socket. Do not pull on the flex, the flex can become overloaded and cause a short circuit.
- Set up the unit so that no one is able to trip over the flex.
- Do not place heavy items on the flex, which may damage it.
- Take note that the flex cannot be reached and pulled by young children, avoiding injury.
- Do not set up the unit near to heat sources. The casing and the flex could be damaged by the impact of heat.
- The screen is made of plastic and can break if damage is done to it. Be careful when collecting sharp edged plastic splinters to avoid injury.
- Avoid placing the unit on any surfaces that may be subject to vibrations or shocks.
- To protect the unit during a thunderstorm unplug the AC power cable and disconnect the aerial. Caution: Do not touch the aerial (RF) connector.
- When you leave your home for long periods of time, unplug the AC power cable for safety reasons.
- The unit becomes warm when in operation. Do not place any covers or blankets on the unit in order to prevent overheating. The ventilation holes are not to be blocked. Do not set up near radiators. Do not place in direct sunshine. When placing on a shelf leave 5 cm (2") free space around the whole unit.

- Do not allow water or moisture to enter the TV. Do NOT use in wet or moist areas such as Bathrooms, steamy kitchens or near swimming pools.
- Do not use this unit when moisture condensation may occur
- Any repairs must be carried out by qualified personnel only.
- Do not open this unit. A non-expert attempting to repair the unit could be dangerous and potentially cause a fire hazard.
- Liquids spilt into the unit can cause serious damage. Switch the set OFF and disconnect the mains power supply, then consult a qualified service person before attempting to use the unit again.
- Do NOT remove the safety covers. There are no useable or serviceable parts inside. You may invalidate the warranty. Qualified personnel must only service this apparatus.
- Do NOT tap or shake the screen, you may damage the internal circuits. Take good care of the remote control, do not drop.
- Never place hot objects or open flame sources on or close to the TV.
- High temperatures can melt plastic and lead to fires.
- To clean the TV use a soft dry cloth. Do NOT use solvents or petrol based fluids. For stubborn stains, you may use a damp cloth with dilute detergent.

### Headphone Warning



Loud music can damage your hearing irreversibly, therefore do not set the volume to a high level when listening through headphones, particularly for lengthy listening periods.


### Where to install

Locate the television away from direct sunlight and strong lights, soft indirect lighting is recommended for comfortable viewing. Use curtains or blinds to prevent direct sunlight falling on the screen. Place the TV on a sturdy platform of which the surface should be flat and steady. This will prevent it from falling over. Make sure the television is located in a position where it cannot be pushed or hit by objects, as pressure will break or damage the screen, and so that small objects cannot be inserted into the ventilation slots or openings in the cabinet.

### LED Screen


The LED display panels are manufactured using an extremely high level of precision technology, however sometimes some parts of the screen may be missing picture elements or have luminous spots. This is not a sign of malfunction.

## Unit and Accessories

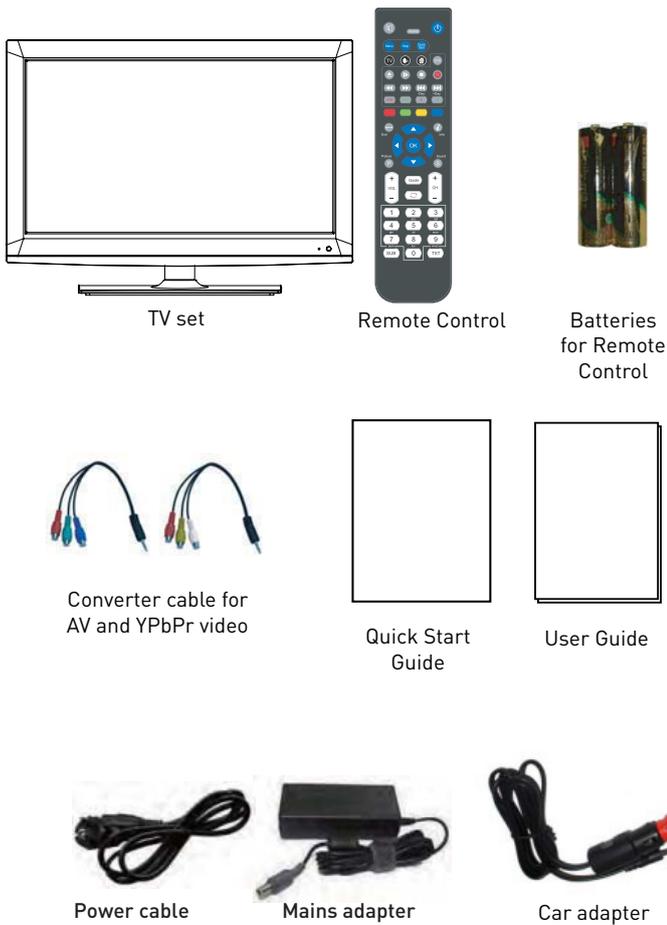

## Getting Started

### Front view

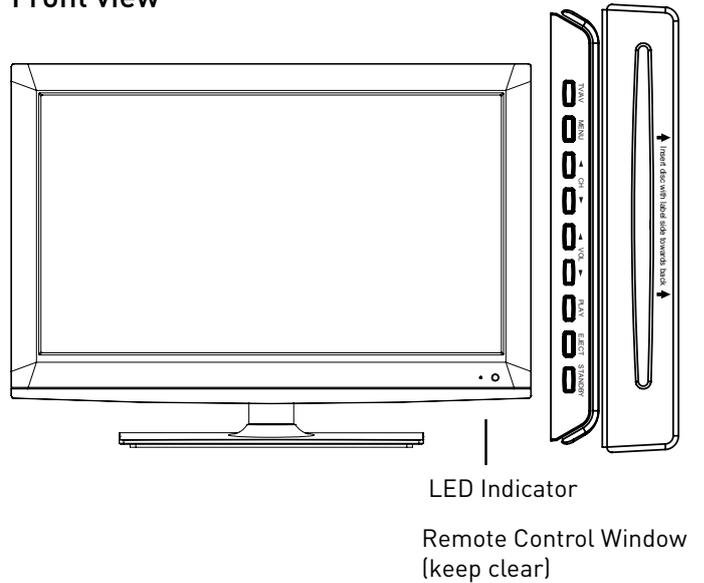

EN

Packaging materials are no toys. Please keep away from children. Plastic bags can cause suffocation when pulled over the head.

This Television is designed to work with any DTT Antenna, Analog or Digital cable or a fixed Satellite Dish aligned with Astra 19.2E and fitted with a universal LNB. Other Dishes and LNBS can be used but full set up is required. The Television is preset for the above fixed dish/LNB and when quickstart is used Astra 19.2E will be instantly tuned without need of a "search"

Note about digital TV: Digital TV (DVB) is available only where digital terrestrial television (DVB-T) is broadcasted or where a compatible cable TV service (DVB-C) is provided. Please ask your dealer if you need further information about the local availability of these services. DVB-T is the standard for terrestrial digital TV and DVB-C designates the digital cable TV service. Despite this TV set conforms with all current DVB-T und DVB-C standards, we cannot guarantee compatibility with any future digital terrestrial DVB-T and DVB-C signals. Some cable TV providers charge additional fees and external hardware is required for their offer, and a subscription for the related services may be necessary. Some digital TV functions may be limited to specific regions and for DVB-C it is possible that the device will not perform as expected with certain providers. For more information, please do not hesitate to contact our Customer Service.

# Remote Control

## Remote control instructions in TV mode



**Mute**  
Unmute sound Available in all modes.

**SOURCE**  
Display / Hide Source Menu.

**Power button**  
On/Off Standby mode.

**Menu**  
Display / Hide main menu, step back one menu, exit menu.

**Help**  
Display / Hide the Help Menu.

**Quick start**  
Display / Hide the Quick start menu.

**USB1**  
Display / Hide list of recorded programs on USB1 (PVR USB Memory)

**USB2\***  
Display / Hide multimedia menu

**A**  
display / Hide the schedule list for USB1.

**B**  
display / Hide the schedule list\* for USB2\*.

**COLOR BUTTONS**  
Color buttons (respectively red, green, yellow and blue) used in a few sub-menus.

**Exit**  
Exit all menus.

**Info**  
info TV modes, index in Teletext mode.

**Picture**  
Picture settings / Aspect settings (available in any mode).

**Sound**  
Sound settings, available in all modes / to select a different audio channel.

**Guide**  
Show/hide the Electronic Program Guide (EPG). Toggles from time to channel display in EPG.

 Last Channel display. In Guide mode Changes from Time to channel display.

**VOL+/VOL-**  
Press to increase / decrease the sound level.

**CH+/CH-**  
When watching a channel, changes the channel. In Channel List mode, step 10 channels.

**NUMBER BUTTONS**  
Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds.

\* depending on the model

## Remote control instructions in DTV/USB mode



### Mute

Unmute sound Available in all modes.

### SOURCE

Display / Hide Source Menu.

### Power button

On/Off Standby mode.

### Menu

Display / Hide main menu, step back one menu, exit menu.

### Help

Display / Hide the Help Menu.

### Quick start

Display / Hide the Quick start menu.



Short cut to ATV source. Sequences ATV, DVBT-TV, DVBT-Radio, ATV



Shortcut to DVBS/DVBS2 source.



Shortcut to DVBC source

### ▶ (Timeshift)\*

Play or pause.

Press to enter Timeshift, the image paused and it start record from the paused position.



Stop playing or stop recording.



Fast reverse and Fast forward.



Previous / next chapter in USB mode or play the Previous /next scene of the recorded programs, jump by 30 seconds.

### VOL+/VOL-

Press to increase / decrease the sound level.

### CH+/CH-

When watching a channel, changes the channel.

### NUMBER BUTTONS

Press 0-9 to select a TV channel directly when you are watching TV. The channel change after 2 seconds.

\* depending on the model

## Remote control instructions in TELETEXT mode



### Coloured

Fast text when in update mode and fast text links present.  
Can be used for other functions in Hold mode.

### Exit

Exit text mode.



### (Index)

Index page (page 100)

### Up/Down

Select +/- Page in Hold mode.

### Left / Right

Hold main page and select sub pages using Red / Green soft.

### OK

Hold page and Expand TOP / Bottom / Full , Use TXT for Update.

### NUMBER BUTTONS

Press 0-9 to select a teletext page.



Press this button to show hidden text (e.g. the solutions for TV quiz shows). Press it again to hide the text.

### SUB


Subtitle display/ select button (can display/Hide a menu).

### TXT

Text / Mix / TV( always in Update mode)

## Installing Batteries in the Remote Control

1. Remove the battery compartment cover at the rear of the remote control by pushing the retaining clip forward and pulling up.
2. Install the supplied batteries, ensuring the polarity matches what is shown in the battery compartment.
3. Replace the battery compartment cover.

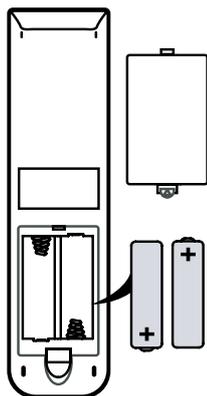

## Using the Remote Control

To use the remote control point it at the TV and press the required buttons. You must be within 6 meters and at an angle of less than 30 degrees from the center of the TV.

**NOTE:** Sunshine or other strong light sources may interfere with the signal from the remote control. In this situation turn the TV away from the light source.



**WARNING!** DO NOT LEAVE BATTERIES IN THE REMOTE CONTROL FOR EXTENDED PERIODS AS THEY CAN LEAK OR CORRODE CAUSING DAMAGE TO THE REMOTE CONTROL. CHECK THEM PERIODICALLY AND REPLACE THEM AS REQUIRED.



**WARNING!** DO NOT MIX BATTERY TYPES. WHEN INSERTING BATTERIES, REPLACE ALL BATTERIES AT THE SAME TIME. DO NOT MIX OLD AND NEW BATTERIES.



**WARNING!** EXHAUSTED BATTERIES MUST BE TREATED WITH CARE AND DISPOSED OF ACCORDING TO ANY SAFETY OR RECYCLING REGULATIONS IN FORCE IN YOUR LOCAL AREA, NEVER DISPOSE OF BATTERIES INTO GENERAL WASTE, OR FIRE.



**WARNING!** NEVER EXPOSE BATTERIES TO EXCESSIVE HEAT SUCH AS SUNSHINE, FIRE OR THE LIKE.


## Aerial connection

**WARNING!** ENSURE THE TV AND ALL ANCILLARY EQUIPMENT IS UNPLUGGED FROM THE MAINS BEFORE MAKING ANY CONNECTIONS!

### Connecting the TV Antenna

Connect the TV antenna to the aerial socket with a 75 ohm co-axial plug. For best results use a high gain TV aerial, preferably roof or loft mounted.

- To improve picture quality in a poor signal area, purchase and install a signal amplifier.
- If the antenna needs to be split for two TVs, use a 2-Way Signal Splitter (not supplied).

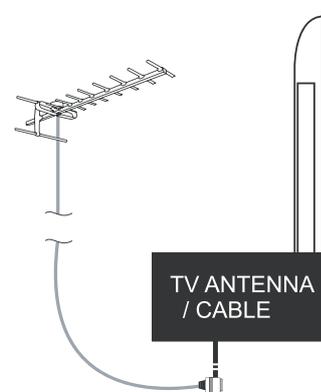

## Connecting external devices

This instruction manual shows the simplest and most effective way of connecting your TV to ancillary equipment. Alternate methods are listed below.

### HDMI Lead

You can connect this TV to a compatible device using a HDMI lead. This method will give the best picture.

Connect the cable from the HDMI equipment to the TV HDMI socket.



### SCART Lead

You can connect this TV to a compatible device using a SCART lead. The connection uses component video signals, i.e. the red, green and blue (RGB) content of the video are sent on separate signals.

### VGA Cable

You can use your TV as a monitor for your personal computer by using a VGA cable. Sound from your personal computer may also be played through the TV.

## Connecting external devices (continued)

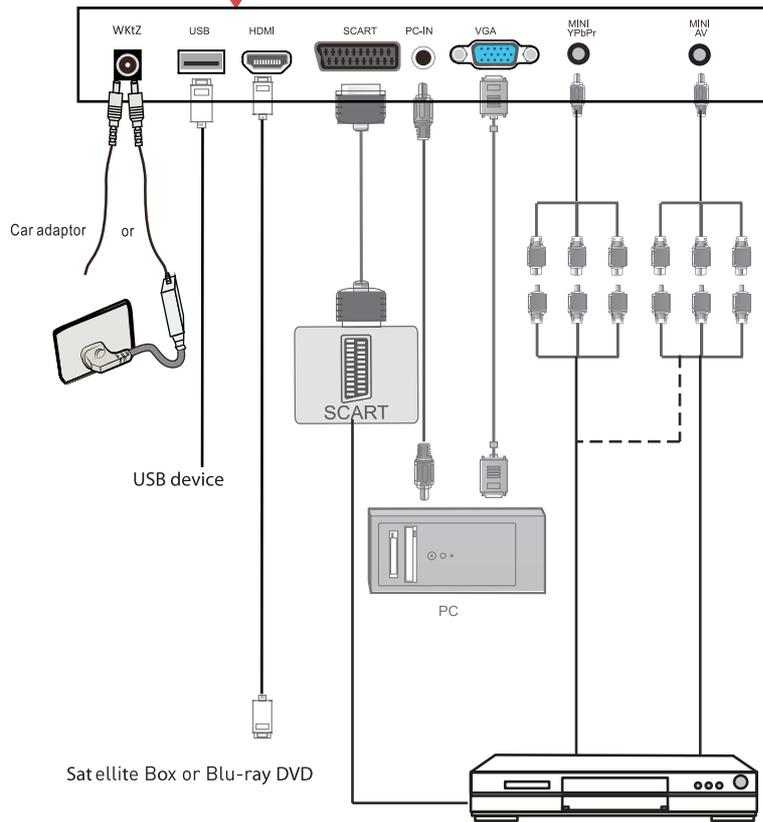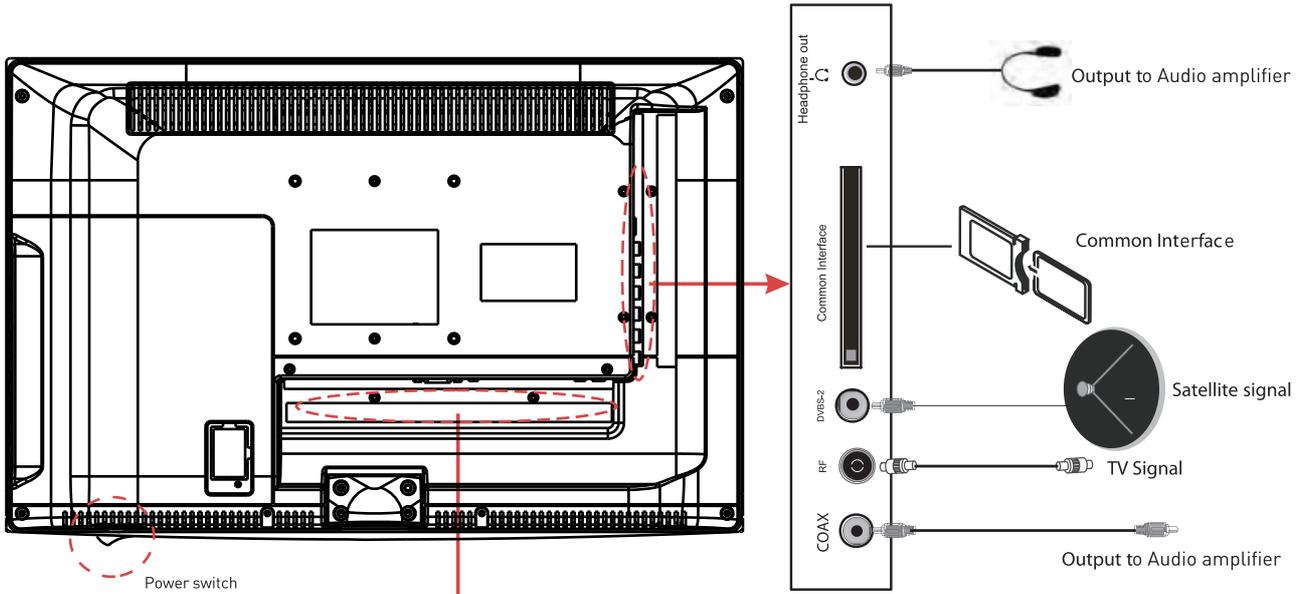

## Connecting external devices (continued)

### CONNECTIONS

Name	Function Description
POWER	Connect to power supply
HDMI	Connect to the HDMI output of your DVD or Satellite Box
SAT LNB Connection	Connect to Satellite signal
VGA (PC IN)	Connect to the PC VGA output to display PC graphics
PC-IN	PC Audio input
Mini YpbPr	Connect to the YPbPr output on external devices
Mini AV	Connect to AV output on external devices
SCART	Connect to the SCART input / output of external devices
RF	Connect to TV signal cable
Head phone	Connect Head phone
CI / CI+	CI slot (Pay as you view card slot)
Coax	Output to audio amplifier
USB	Media playback

#### Caution:

Before connecting external devices:

- Makes sure to disconnect the appliances from the power supply in order to avoid any potential damage from occurring.
- Make sure to establish the required connection.
- Make sure that the connectors are properly and correctly attached before connecting the appliances to the power supply.

### PC connection

As PCs are sometimes still supplied with a 'conventional' CRT monitor, you may need to adjust the display settings of your PC's graphics card, otherwise the pictures may not appear correctly. Switch on your PC (still with your original monitor connected) now select the screen resolution, and select 60Hz refresh rate. Switch off your PC, then connect it to your TV while both appliances are still switched off.

### VGA, HDMI PC Connection


Use a PC-VGA cable (not supplied) to connect the TV to your PC. You can also use an HDMI cable to connect to your PC (if your PC Graphic card supports HDMI). When the HDMI cable is used, the PC audio cable is no longer required. If you use the HDMI to DVI cable, you will need to use the PC audio cable. Connect all cables carefully and do not bend or break the connector pins.

When using the VGA cable

- Switch on the TV
- Switch on the PC
- Select PC/VGA as input source

When using the HDMI cable

- Select HDMI as input source

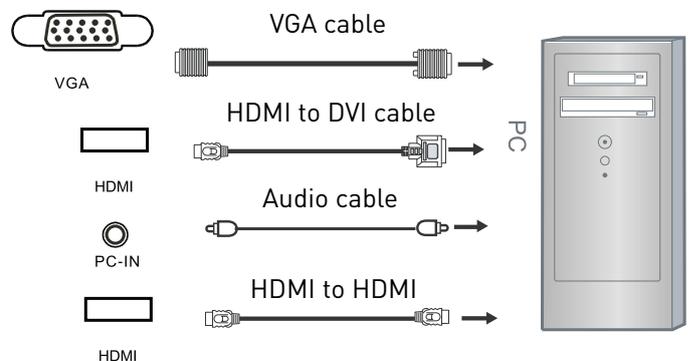

(All illustrated cables are not supplied)

### Satellite connection



Connect the DVB-S/DVB-S2 signal to the SATELLITE LNB on the TV SET. Select the SATELLITE input source using the DVBS/DVBS2 button on the remote control.

**Note:** If there is no DVBS(S2) reception, please check whether there is any problem (such as a short-circuit) on the F-type connector, on the LNB cable, the multi-switch etc. of your satellite antenna system. In this case, please disconnect the TV set from the antenna system. If necessary, consult a qualified technician to solve the problem.

## Connecting Video camera and Video recorder

### Video camera



- Connect the AV cable to the TV and to the video camera.
- Turn on both video camera and the TV.
- Select AV/CVBS source
- You can now see the playback picture from the video camera. Note:
- To connect the video camera using other cables, refer to the video camera instruction manual.

### Video recorder

- Connect the Scart cable to the TV and video recorder.
- Turn on both video recorder and the TV.
- Select Scart source
- You can now see the playback picture from the video recorder.

Note:



To connect the video recorder using other cables, refer to the video recorder instruction manual.

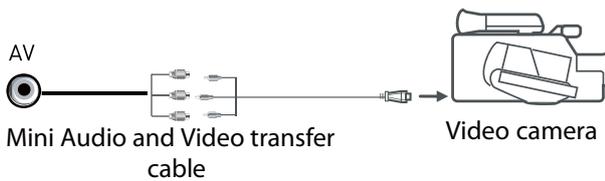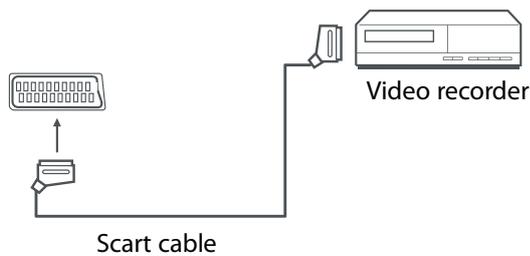

(Mini AV cables are supplied)

## Connecting an audio system


You can supply the TV sound to the stereo system (A) with the Scart socket. Use a special Scart cable SCART to RCA. (Please consult your hi-fi instructions for details). If you have a surround sound amplifier/decoder (B) Use the Scart cable or the special Scart cable Scart to RCA.

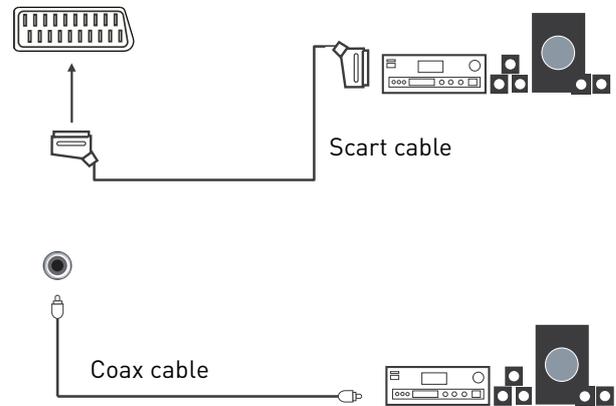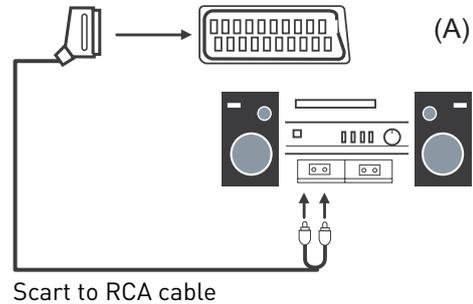

(All illustrated cables are not supplied)

## Connecting a DVD player

Connect a DVD player using either a SCART cable or the HDMI cable. (Only if your external equipment supports HDMI).

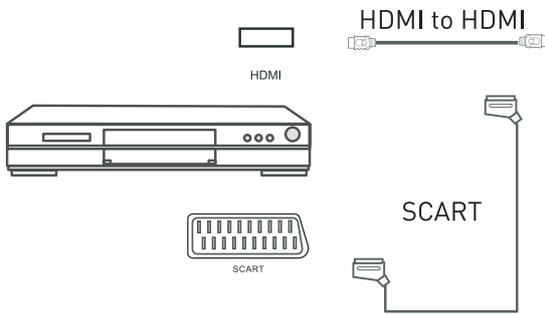

(All illustrated cables are not supplied)

When using the SCART cable


- Switch on the TV
- Switch on the DVD player
- Select SCART as input source

When using the HDMI cable

- Select HDMI as input source

## HDMI Connection


TV Back

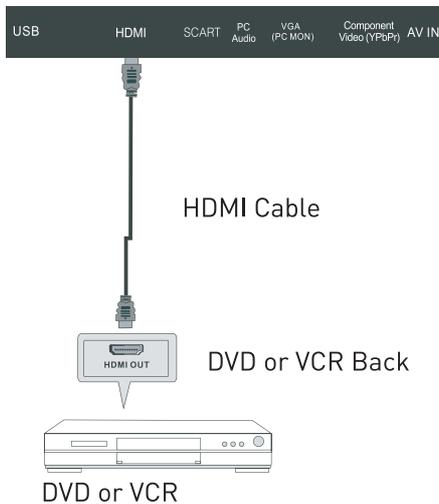

HDMI connection allows the user to transfer all audio/video/control signals through one cable only. These signals are transferred in digital.


## USB Connection

Put the USB flash drive in to the USB port, Select the USB channel source using the SOURCE button on the remote control. The maximum supported capacity of external storage devices (e.g. USB memory stick or USB hard disk) is 1TB. However, not all available storage media may be compatible.

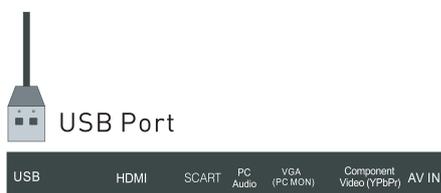


TV Back

## SCART Connection

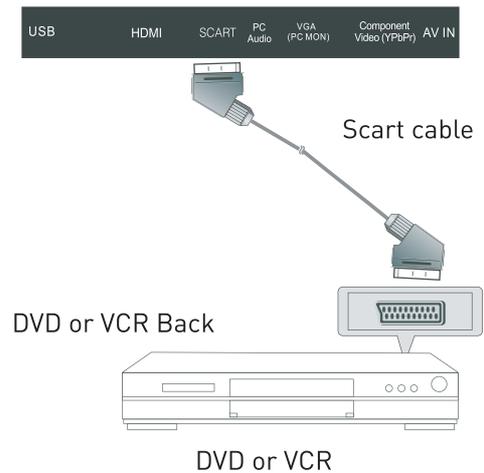


Connect the SCART connector to the external video item and the SCART connector on the TV. The SCART lead operates as an Input/Output connection. If the tv does not select the SCART input automatically, press the SOURCE button on the remote control and select the SCART signal source.

## AV Connection

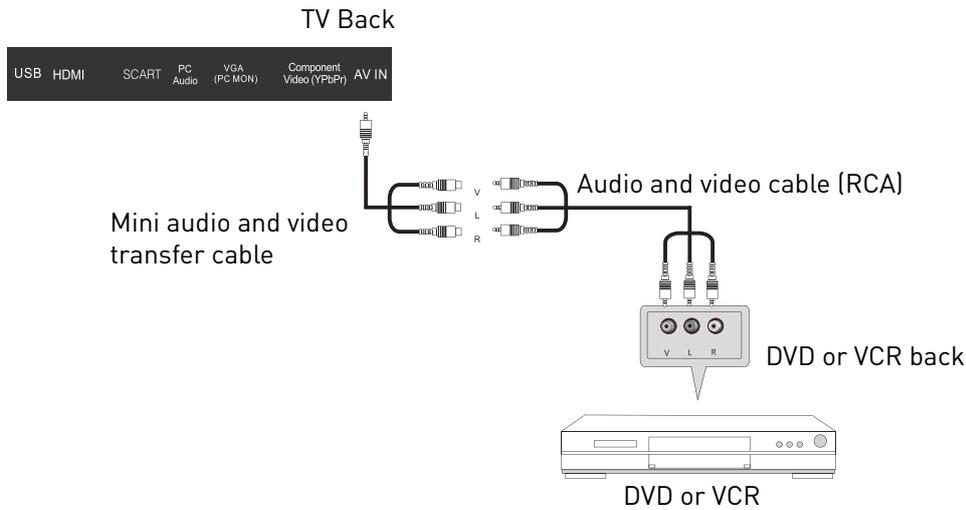

Connect the VIDEO and AUDIO output jack of the DVD or VCR to the VIDEO jacks on the TV set using the supplied YPbPr converter cable and an RCA cable (not supplied). Match the jack colors: Video is yellow, Audio left is white, and Audio right is red. Press the SOURCE button on the remote control and select the AV input source.

## YPbPr Connection

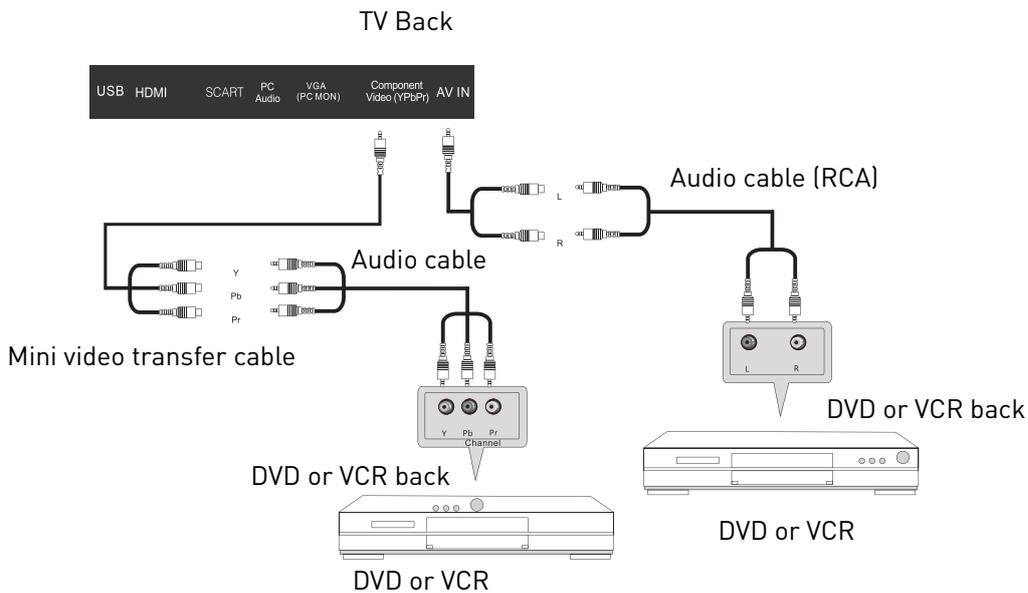

Connect the YPbPr output of the DVD or VCR to the YPbPr input on the TV set. Connect the Audio output of the DVD or VCR to the Audio input jacks on the TV set using two RCA cables together with the supplied converter cables. Match the jacks colors : Y is green, Pb is blue, Pr is red, Audio left is white, and Audio right is red. Press the SOURCE button on the remote control and select the YPbPr input source.

## Common Interface Slot

### USING YOUR COMMON INTERFACE SLOT


This TV set features a CI+ slot and supports the following digital standards: DVB-T, DVB-S(S2) and DVB-C.

#### Common Interface

The Common Interface (CI+) slot is designed to accept the Conditional Access Module (CAM) and Smart Card in order to view the pay TV programmes and additional services. Contact your Pay Per View TV service provider to get more information about the modules and subscriptions.

NOTE: Conditional Access Module and Smart Cards are sold separately.

WARNING! SWITCH OFF YOUR TV BEFORE ANY MODULE IS INSERTED INTO THE COMMON INTERFACE SLOT, THEN ADD THE SMART CARD TO THE CAM.

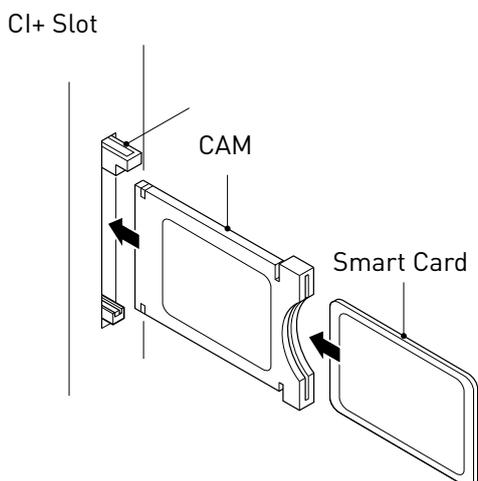

1. Turn on the TV and ensure 'DTV' Source is selected.
2. If the CAM is detected the TV will display the following message on the screen. "Common Interface Module inserted" wait for a few moments until the card is activated.
3. Select the relevant digital Pay Per View channel.
4. Detailed information on the Smart Card in use is displayed
5. Press the Ok button to access the card menu. Refer to the Module Instruction Manual for setting details.
6. When the module is removed, the following message will appear on the screen. "Common Interface module removed".

## Auto installation setup

### Power On / Off the LED TV

#### To turn on the LED TV

Press the power button on the LED TV or the POWER button on the remote control, the standby indicator will light green.

#### To turn off the LED TV

Press the power button on the LED TV or the POWER button on the remote control, the standby indicator will light red.

When you initially turn on the LED TV you will see the first time installation menu as below:



Use the left/Right keys to select your language use the up/down keys to select the type of service you want to install. You can only install one service at a time but you can return to this menu in order to install an additional service by pressing the Quick Start button.

**ATV** (Analogue Television) is used for Analogue Cable systems.

**DVB** (DTT - Digital Terrestrial Television, DVB-T) is used if you have an antenna receiving signals from a terrestrial transmitter.

**Cable** is used for Digital Cable systems (DVBC)

**Satellite** is preset for Astra 19.2E. You need a fixed dish with a universal LNB. To install any other satellites use the full satellite installation menu.

Press OK button and you will see the following menu.



Ensure your aerial, cable or dish is plugged in to the TV and then press OK again.

The TV will start to install the service you have selected. This could take some time depending on your selected service.

You can tune an additional service at any time by pressing the Quick Start button.

## TV SETTINGS Menu


All options mentioned on the previous page can also be accessed through the Main Menu system in the TV Settings menu.

To access the correct service you need the TV to be in the correct mode, ATV, DVB, Cable or Satellite.

Select the desired signal source either from the handset or from the source menu.

### Signal Source

Press the Source button on the remote control or the TV/AV button on your LED TV to select the signal source.

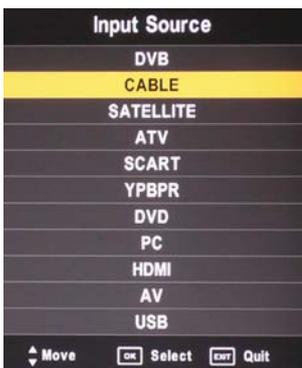

Press the ▲▼ buttons to highlight the desired signal source. Press OK to select it.

After you have selected the desired operating mode, press the Menu button on the remote control to display the "TV Settings" menu.

When you are in the correct mode, press Menu button on the remote control and enter the TV Settings Menu

To select the TV mode directly from the remote control use the 3 mode keys

Press MENU button to display the main menu, use left/right buttons to select EINSTELLUNGEN menu, press OK or down button to enter the menu. Press MENU or up button to return to the main menu.

NOTE: TV SETTINGS can only be selected under the ATV/DVB/SATELLITE/CABLE modes, it is disabled whilst in all other modes.

### ATV / CABLE SETTINGS



### DVB / DVB-T SETTINGS



### SATELLITE / DISH SETTINGS



### DIGITAL CABLE (DVBC) SETTINGS




### Auto Scan

In the Auto Scan menu there are 3 options for you to select from: DVB Select type, Country and Tune Type.





## PROGRAMME EDIT

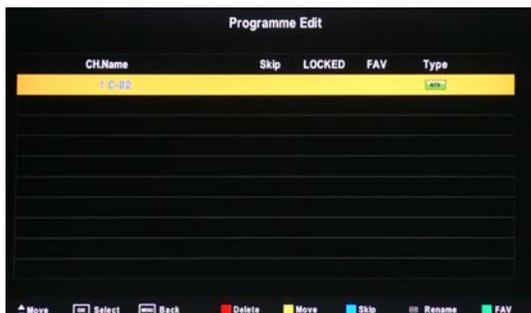

Use up/down keys to select program edit. Press OK or Right button to enter the menu. Use up/down buttons to navigate through the menu

### Delete

Press the RED button to delete the highlighted channel, a red circle will appear next to the channel name.

Press the RED button again to confirm delete.

Press the MENU to return to the main menu.

### Move

Press ▲▼ to select the channel, press yellow button to enter the move mode, then press ▲▼ to move the channel location, press yellow button again or press OK to confirm.

Press MENU to return to the main menu.

### Skip

Press ▲▼ to select the channel you wish to skip.

Press the BLUE button, a logo will appear next to the channel name and the channel will be skipped when you scroll through the channels.

Press the BLUE button again on the highlighted channel to disable the skip function. Press MENU to return to the main menu.

### Rename (Only available in ATV)

Modify current channel name.

Press the ◀▶ button to enter RENAME mode, then use the ▲▼◀▶ buttons to change name. Press the green button, the OK button or the menu button to confirm.

### Favorite

Press the green button to set the favorite channel.

Press MENU to return to the main menu.

### Signal Information

Only available in DTV mode, Signal Information includes: channel /network/modulation/quality/strength.

## CI Information

When insert CI Module, display CI Information.

Note: The following reception types or reception combinations are possible: ATV, DVB-C, DVB-S(S2), DVB-T, ATV and DVB-C, ATV and DVB-S(S2), ATV and DVB-T. The simultaneous reception of DVB-C, DVB-S(S2) and DVB-T channels is not possible.

### 5V antenna power

Press ◀▶ button to turn on or off.

### Power-Off-No-Signal-Down

If no valid input signal is detected, the TV set will toggle to standby mode automatically after approx. 10 minutes.

### Auto-Power-Down

4 hours maximum after the last user interaction and/or the last channel switching, the TV set will automatically toggle from On to standby mode. Prior to this automatic toggling, a message will be displayed allowing you to extend the delay time for another 4 hours.

### Guide (EPG – Electronic Program Guide)

Press the GUIDE button on the remote control to open the Electronic Program Guide. EPG contains a 7-day programme preview as long as the selected channel supports this function. If there is more information about a programme, press the ▲▼ and ◀▶ buttons to scroll through the pages. Please note that the maximum viewable number of characters is limited.

### Favourite Lists

Select the desired channel and press the green (Fav) button to add it to the list of favourite channels. To remove a channel from the favourite list, select the desired channel and press the green (Fav) button. You can display your favourite list by pressing the green (Fav) button. You can create an own favourite list for each tuner module.

### Dish Setup

1. If you do not have a fixed dish aligned to Astra 19.2E fitted with universal LNB you will need to use this section.
2. If you have a fixed Dish aligned to a different Satellite or with a different LNB you will need to use this section.
3. If you have a motorised Dish with a DiSEqC rotator and wish to tune more than one satellite you will need this section.
4. If you are on a DiSEqC switch system you will need this section.

The first 2 installations can be done by most people so long as you know what satellite your dish is aligned with and what type of LNB it is fitted with.

Installation of 3 & 4 require an experienced user or engineer.

## To set a different Satellite or LNB

Select Satellite mode, press MENU key, navigate down to the Dish Setup option, press OK. You will see the Satellite Dish Setup menu.



## To set Multiple Satellites and LNBs (only possible on multi-LNB dish, switch systems)

Use ▲▼ buttons to select the satellite to which your dish is aligned. Press OK. An arrow will display against the chosen satellite.

Press ► button to navigate to LNB section of the menu. Select the LNB type and settings for your LNB.

Press the Exit button and the ◀ button to select the second satellite.

Use ▲▼ buttons to select the second satellite. Use ▲▼ keys to select the satellite to which your dish is aligned. Press OK. An arrow will display against the chosen satellite.

Press ► button to navigate to LNB section of the menu. Select the LNB type and settings for your second LNB and switch settings.

Press the Exit button and the ◀ button.

Press the blue Key twice to search the satellite channels.

A full description of the advanced Dish set up for multiple satellites using DiSEqC switches and DiSEqC positioner follows. This should only be attempted by experience users.

The Dish set up main menu page displays the main interface. The interface consists of Satellite List, Transponder list and Dish/LNB parameter list

## Satellite List


The Satellite list displays the satellite names.



## Satellite Edit

**No.** The current list number of the selected satellite Satellite name. The No. cannot be edited.


**Satellite name:** Press the green button to open the edit menu explained below.

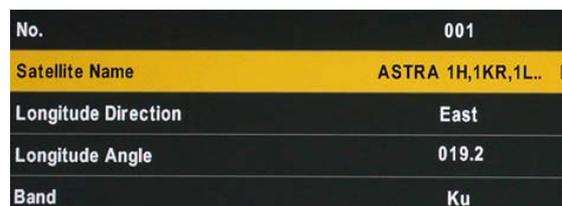

For editing via the on-screen keyboard, press the ► button.

In the input frame, use ▲▼◀▶ and OK button to select characters.

Input Frame (On-screen keyboard)

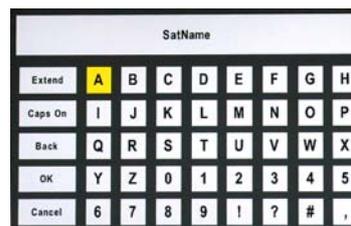

**Extend:** Extended characters

**Caps On:** Change character case. Press OK button to select.

**Back:** Delete letters, press OK to confirm.

**OK:** Sure to set the naming of the satellite, and return to Edit Menu

**Cancel:** Return directly back to edit menu.


**Longitude Direction:** Added to determine the location of the satellite. Use the ◀ arrow buttons to select West/ East.

**Longitude Angle:** Input Longitude. By moving the cursor tu buttons to enter the satellite longitude.

**Band:** band selection. Press ◀▶ to select.

## Delete Satellite menu

Press the YELLOW button, the confirmation menu will appear. Press OK to delete.

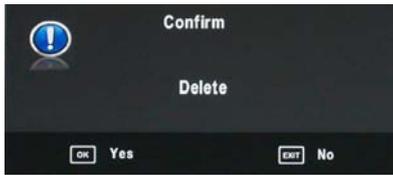

## Add Satellite

Press the RED button to see the Add menu.

Add	
No.	001
Satellite Name	ASTRA 1H,1KR,1L... ▷
Longitude Direction	East
Longitude Angle	019.2
Band	Ku

**NO:** This is the list placing number. This number cannot be manually edited.

Adjust all settings and parameters according to the instructions of the previous section. Press OK to save or press EXIT to cancel.

A new position number will be assigned to the added satellite.

## Transponder List

The list shows the transponders for the selected satellite.

TransPonder	
001	11509 V 22000
002	11538 V 22000
003	11568 V 22000
004	11597 V 22000
005	11686 V 22000
006	11739 V 27500
007	11778 V 27500
008	11817 V 27500

## Edit Transponder menu

Press GREEN button to enter Transponder edit menu.

Edit	
TransPonder	001
Frequency (khz)	10723
Symbol(ks/s)	29900
Polarity	H

**No.** This is the list placing number. Nr. cannot be manually edited


**Frequency:** Set the downlink frequency.

**Symbol (ks/s):** Set the Symbol Rate.

**Polarity:** Set the polarity (horizontal or vertical).

## Delete Transponder

Press the YELLOW button, the confirmation menu will appear. Press OK to delete.

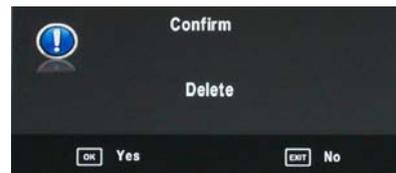

## Add Transponder

Press RED button to enter the add transponder menu.

Add	
TransPonder	001
Frequency(khz)	11509
Symbol(ks/s)	22000
Polarity	V

**No.** Can not be manually edited.

**Frequency:** Set the downlink frequency.

**Symbol (ks/s):** Set the Symbol Rate.

**Polarity:** Set the polarity (horizontal or vertical).

## Dish Parameter description

LNB Type: LNB Frequency

013.0E Ku_HOTBIRD 6,7A,8	
LNB Type	◀ 09750/10600 ▶
LNB Power	On
22KHz	Auto
Toneburst	None
DiSEqC1.0	None
DiSEqC1.1	None
Motor	None

Highlight the LNB Type , and use the ◀ ▶ buttons or Ok to enter submenu then you can set specific parameters.

013.0E Ku_HOTBIRD 6,7A,8	
LNB Type	09750/10600
<b>9750/10600</b>	
9750/10750	
05150	
05750	
09750	
10600	
10750	

013.0E Ku_HOTBIRD 6,7A,8	
LNB Type	09750/10600
11300	
11475	
<b>User Single</b>	
User Dual	

LNB Power: Polarization switching power supply, Press ◀ ▶ to select On/Off.

013.0E Ku_HOTBIRD 6,7A,8	
LNB Type	09750/10600
LNB Power	◀ On ▶
22KHz	Auto
Toneburst	None
DiSEqC1.0	None
DiSEqC1.1	None
Motor	None

On: Allowed to receive Horizontal / Vertical Polarization program.

Off: out-off of supply.

22KHz: The level of the LO switch / DS switch ( Require the user to have installed 22KHzSatellite signal switch). Press ◀ ▶ to select Auto/On/Off.

013.0E Ku_HOTBIRD 6,7A,8	
LNB Type	09750/10600
LNB Power	On
<b>22KHz</b>	◀ Auto ▶
Toneburst	None
DiSEqC1.0	None
DiSEqC1.1	None
Motor	None

Auto: Automatically issued 22 KHz pulse signal to control switching.

On/Off: Manual control switch.

Tone burst: Double Single Switch (Require users to install Tone burst switch), Press ◀ ▶ to select Burst A/Burst B/None.

Burst A /Burst B: Manually switch the satellite A/B.

DiSEqC1.0: 4 select 1 switch ( Require the user device support DiSEqC 1.0 protocol). Press ◀ ▶ to select LNB1/ LNB2/ LNB3/LNB4/None.

LNB1/LNB2/LNB3/LNB4: Corresponding to a satellite , After selecting the corresponding list will appear in the satellite list.

**DiSEqC 1.1:** 16 select 1 switch ( Require the user device support DiSEqC1 .0 protocol) Equipment needs support DiSEqC 1.1 protocol, Most control 16↑LNB. Press ◀▶ to select LNB1~LBN16/None.

**LNB 1-LNB 16:** Corresponding to a satellite, After selecting the corresponding list will appear in the satellite list.

**Motor:** Control of multi-satellite polar (Require the user device support DiSEqC1.2 or DiSEqC1.3 protocol), Left and right buttons to select DiSEqC1.2/ DiSEqC1.3/None.

DiSEqC1.2: DiSEqC1.2 Protocol selection

DiSEqC1.3: DiSEqC1.3 Protocol selection

For Motor definite "DiSEqC1.2" , Operating Instructions:

Press RED button to enter "Set Limit" menu.

Press OK button to enter Set Position menu.

**Move Continue:** Control of the east or the west continued to turn the polar axis to the desired position.

**Move Step:** Control of the east or west, at a fixed polar axis step rotation.

Set Limit	
Move Continue	◀ STOP ▶
Move Step	STOP
Set West Limit	
Set East Limit	
Goto Reference	
Disable Limit	

**Set West Limit:** The current position is set to the maximum point of the west.

**Set East Limit:** The current position is set to the maximum point of the east.

**Goto Reference:** Back to the default values.

**Disable Limit:** Abolish the current limit set.

Set Position	
Move Auto	◀ STOP ▶
Move Continue	STOP
Move Step	STOP
Store Position	
Goto Position	
Goto Reference	

**Move Auto:** East or west of Automatic Control continued to turn the polar axis to the desired position.

**Move Continue:** Manual control of the east or the west continued to turn the polar axis to the desired position.

**Move Step:** Control of the east or west, at a fixed polar axis step rotation.

**Store Position:** Save the current rotation angle of polar axis.

**Goto Position:** Control the polar angle automatically to the previously saved.

**Goto Reference:** Control the angle of polar axis automatically to the default. When Motor definite "DiSEqC1.3".

Press RED button to enter "Set Limit" and Motor Defined as "DiSEqC1.3" "Set Limit" menu same.

013.0E Ku_HOTBIRD 6,7A,8	
LNB Type	09750/10600
LNB Power	On
22KHz	Auto
Toneburst	None
DiSEqC1.0	None
DiSEqC1.1	None
Motor	◀ DiSEqC1.3 ▶

Press GREEN button to enter Set Location menu.

Set Location	
Location	◀ Manual ▶
Longitude Direction	East
Longitude Angle	000.0
Latitude Direction	North
Latitude Angle	000.0

**Location:** Select the user area or similar areas, if the user is not in the system default settings when in these areas, can select Manual custom settings.

**Longitude Direction:** Select the user area in the east longitude or longitude.

**Longitude Angle:** Longitude angle. Select the user area in which the longitude, Enter the appropriate values to move the cursor.

**Latitude Direction:** Select the user area in the latitude or latitude.

**Latitude Angle:** Select the user latitude area, Enter the appropriate values to move the cursor.

Press OK button to enter Set Position menu.

Set Position	
Move Auto	STOP
Move Continue	STOP
Move Step	STOP
Store Position	
Goto Position	
Goto Reference	

**Move Auto:** East or west of Automatic Control continued to turn the polar axis to the desired position.

**Move Continue:** Manual control of the east or the west continued to turn the polar axis to the desired position.

**Move Step:** Control of the east or west, at a fixed polar axis step rotation.

**Store Position:** Save the current rotation angle of polar axis.

**Goto Position:** Control the polar angle automatically to the previously saved.

**Goto Reference:** Control the angle of polar axis automatically to the default.

**GotoX:** Area based on user input parameters, Automatically calculate the satellite over the area,

Control the polar axis rotation to the right place.

### Scan Menu

When all the parameters after. Press BLUE button to Tuning the setup menu to enter.

Channel Search	
Scan Mode	Default
Channel Type	All
Service Type	All
Polarization	Auto

**Scan Mode:** Scan from Default, Blind Scan and Network to select.

Default: Default search program.

Blind Scan: Searches all the programs for the LNB settings. (This is a long search but will find all channels including new Channels).

Network: Search the known channel frequencies for the selected LNB & Satellite settings at the time of manufacture. (This will be the quickest search).

**Channel Type:** FTA (Free to Air) or ALL (Free to Air and Pay Channels).

**Service Type:** DTV (DVB TV) or Radio (DVB Radio) or both DTV & Radio.

**Polarization:** The LNB polarization: H (horizontal), V (vertical) and AUTO depending on the LNB installation.

## Menu Settings

### Picture menu



**Picture Mode:** Choose from Standard, Dynamic, User and Mild.

**Note:** Contrast, Brightness, Colour and sharpness are only available and can be adjusted in the User mode option in the Picture Mode Settings.

**Contrast:** Controls the difference between the brightest and darkest regions of the picture.

**Brightness:** Controls the overall brightness of the picture.

**Color:** Control the color.

**Sharpness:** Increase this setting to see crisp edges in the picture; decrease it for soft edges.

**Tint:** Controls the tint ( NTSC mode only).

**Color Temperature:** Choose from Medium, Cool, User and Warm.

**Red:** Controls the red colour of the picture.


**Green:** Controls the green colour of the picture.

**Blue:** Controls the blue colour of the picture.

**Aspect Ratio:** Choose from Auto, 4:3, 16:9, Zoom1, Zoom2, and Panorama.

**Noise Reduction:** Choose interference noise modes from Off, Low, Middle and High.

## SOUND menu

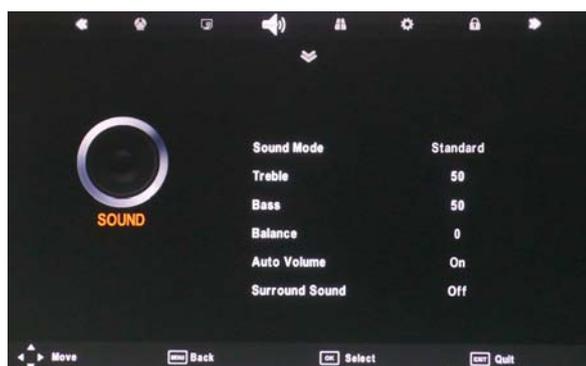

**Sound Mode:** Allows you to select among: Standard, Music, Movie, Sports and User.

**Treble** (Can be adjusted when the sound mode is set to User): Controls the relative intensity of higher pitched sounds.

**Bass** (Can be adjusted when the sound mode is set to User): Controls the relative intensity of lower pitched sounds.

**Balance:** To adjust the balance of the left and right speakers audio output, or turn off the volume of the left or right speaker.

**Auto Volume:** This feature automatically adjusts the audio level when the TV is turned on. This function is activated by selecting "On".

**Surround Sound:** Turn on / off the surround sound function by selecting "On" or "Off".

## EXTRAS menu



**Sleep Timer:** Allows you to setup the sleep timer: 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min and off.

**PC Setup** (PC mode only): Press the OK button to enter the submenu to adjust the Horizontal / Vertical position or Size and Phase of the picture.

To select automatic installation use the up down buttons to highlight the option and press OK.

## OPTIONS menu



**OSD Language:** Allows you to select the on screen display menu language.

**Audio Language** (can only be selected in DTV mode): Select the audio language. The availability of this function depends on the tuned-in channel.

**Subtitle Language** (can only be selected in DTV mode): Select the subtitle language. The availability of this function depends on the tuned-in channel.

**Menu Time Out:** Allows you to setup the length of time that the on screen display is visible: 5s, 10s, 15s, 20s, 25s, 30s, 35s, 40s.

**Country:** This is defaulted to Germany, but can be changed by using the Auto tune function.

**Restore Setting:** Press the OK button to restore the factory default settings.

## LOCK menu



The password must be entered to access the Lock Menu. The default password is 0000. Once inside the menu you can change the password to your own choice.



Lock System: Enables or disables the system lock. After selecting ON, the settings made under "Lock Channel", "Parental Guidance" and "Hotel Settings" will be enabled and applied.



Set Password: If you had already changed the password, enter the current password.

Old Password: Enter the current password.

New Password: Enter the new password.


Confirm New Password: Enter the new password.

You can use the Channel Lock to lock selected channels. Press the ▲▼ buttons to select the desired channel and then press the GREEN button on the remote control to lock it. To unlock a previously locked channel, select the channel and press the GREEN button.

Note: In order to view locked channels, you have to enter your password.

Parental Guidance blocks programmes according to their parental level. This feature is available only for digital TV and the tuned-in channel must support it.

EN

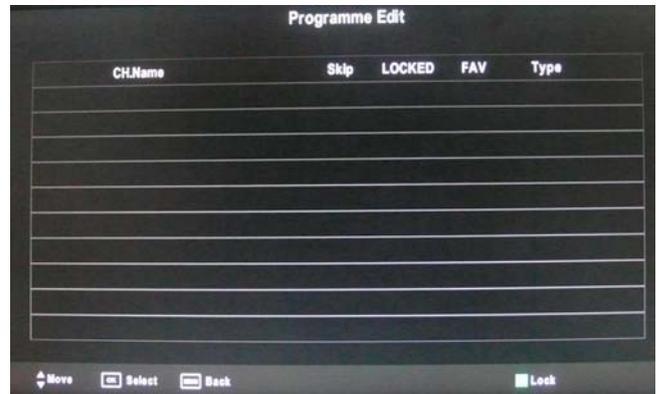

Hotel Setting: Opens the "Hotel Setting" menu.

## Hotel mode

Hotel Setting	
Hotel Lock	Off
Lock Channel	Off
Set Source	Off
Picture Lock	Off
Key Lock	Off
Max Volume	100
Source Lock	
Clear Lock	
DataBase Export	
DataBase Import	
QuickStart Lock	Off
Menu Lock	Off

Restricts access to tuning menus, limitation of maximum volume setting. Locks picture and signal menus.

**Hotel Lock:** Press the ▲▼ buttons to select the "Hotel Lock" option and then press ► to choose between the options ON or OFF. After selecting ON, the following options except the "Clear Lock" option are available.

**Lock Channel:** Press the ▲▼ buttons to select the "Lock Channel" option and then press ► to choose between the options ON or OFF. After selecting ON, the TV settings options will not appear in main menu any more.

**Set Source:** Press the ▲▼ buttons to select the "Set Source" option and then press ► to choose a signal source or OFF. This function lets you set the signal source (DVB/Cable/Satellite/ATV/SCART/AV/YPBPR/PC/HDMI1/USB) to be used when powering on the unit. It will be used until you select a different signal source or disable this function (OFF).

**Picture Lock:** Press the ▲▼ buttons to select the "Picture Lock" option and then press ► to choose between the options ON or OFF. After selecting ON, the Picture menu options will not appear in main menu any more.

**Key Lock:** Press the ▲▼ buttons to select the "Key Lock" option and then press ► to choose between the options ON or OFF. After selecting ON, the front panel buttons TV/AV/ Menu/CH+/CH-/VOL+/VOL- of the device will be locked.

**Max. Volume:** Press the ▲▼ buttons to select the "Max. Volume" option and then press ► to set the desired volume. Then the output volume will never exceed the set maximum value.

**Source Lock:** Press the ▲▼ buttons to select the "Source Lock" option and then press OK to enable the menu. Press the ► button to toggle between ON and OFF. All signal sources labelled ON will not be available any more in the signal source selection menu.

**Clear Lock:** Press the ▲▼ buttons to select the "Clear Lock" option and then press ► to enable it. All hotel settings will remain disabled until you enable the Hotel Lock again.

**Database export and import:** Allows Picture, Sound, Options, Lock and Hotel menus to be copied from one set to other sets, to make a group of sets all set up the same.

To export the settings to a file on a USB memory: Connect a USB memory stick to the USB1 port. Select "Database export". Press the ► button. When export is completed successfully "Export Success" is displayed.

To import the settings on the same type AIL model: Insert the memory stick containing the file in USB1 of the new TV. Select "Database import". Press the ► button. When complete the TV will turn off. When turned on again it will have same settings as the first TV.


**QuickStart Lock:** Press the ▲▼ buttons to select the "QuickStart Lock" option and then press ► to choose between the options ON or OFF. After selecting ON, the QUICK START button on the remote control will be disabled.

**Menu Lock:** Press the ▲▼ buttons to select the "Menu Lock" option and then press ► to choose between the options ON or OFF. After selecting ON, all submenus except the "Lock" menu will not appear in main menu any more.

# Multimedia Operation


## Basic Operation

1. Press the SOURCE button on the remote control to display the input source menu, select the USB source with the ▲▼ buttons and press the OK button to enter the Multimedia menu below.

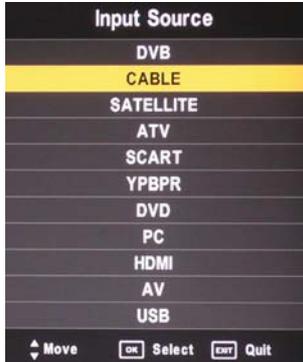

EN

2. Insert the USB device, the name of the device will be displayed on the screen.

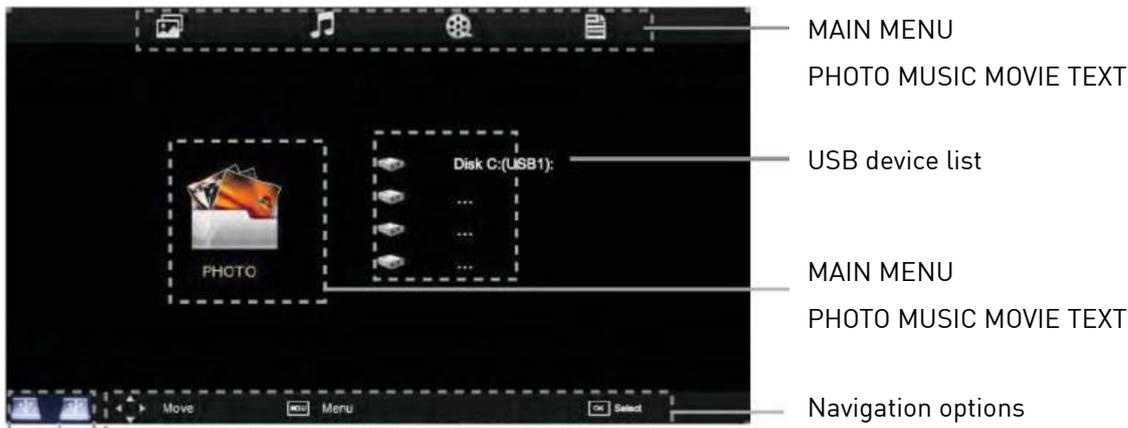

Information of the USB device

- 3). Press ◀▶ button to select the files on the USB device (PHOTO, MUSIC, MOVIE, TEXT) to view or play.



Press ▲/▼/◀/▶ buttons to select and the OK button to activate the file or open folder. Press ▶▶ button to play the files in full screen mode. When in full screen mode press the OK button to show the navigation option menu on the bottom of the screen or press ■ stop button to return to files.

## 1. Photo

### Photo viewing



Press ◀/▶ buttons to select the option on the menu, and press the OK button to activate.

**Repeat:** Select the repeat mode from Repeat All, Repeat 1, Repeat None.

**Music:** Play/Pause the background music of your choice.

**Playlist:** Display the playlist on the screen and select the photo of your choice.

**Info:** Display the information of the file.

**Rotate:** Rotate the photo clockwise/counterclockwise.

**Zoom In/Out:** Zoom In/Out of your photos.

**Move View:** Move the photo in Zoom out mode.

## 2. Music

### Listen to music



Press ◀/▶ buttons to select the option on the menu, and press the OK button to activate.

Press ▲/▼ buttons to select the music, and press the OK button to play.

**Repeat:** Select the repeat mode from Repeat All, Repeat 1, Repeat None.

**Search:** Program the music to play from the time you set.

Press the OK button to display the time table, and select the position with the ▲▼◀▶ buttons, set the time using the numeral buttons on the remote, select "OK" and press the OK button to search.

**Screen Saver:** Press the BLUE button to enter the Screen Saver mode, press any button to exit.

## 3. Movie

### Watch a film



Press ◀/▶ buttons to select the option on the menu, and press OK button to activate.

**Repeat:** Select the repeat mode from Repeat All, Repeat 1, Repeat None.

**Set A-B:** Select and play the preferable part of the file by setting A and B at the beginning and end. Press OK button to cancel.

**Playlist:** Display the playlist on the screen.

**Info:** Display the information of the movie file.

**Slow:** Play the movies at slow speed, press T button to cancel and resume at normal speed.

**Step:** Step quickly through the movie by using this option

**Search:** Program the movie from the time you set.

**Zoom In/Out:** Zoom In/Out of the movie screen.

**Aspect Ratio:** Select the aspect ratio of the on screen display.

**Move View:** Moves the enlarged picture area.

## 4. Text

### View text files



Press ◀/▶ buttons to select the option on the menu, and press the OK button to activate.

**Prev/Next page:** Turn to previous/next page of the text.

**Prev./Next:** Turn to previous/next file.

**Stop:** Stop auto turning pages.

**Music:** Play/pause the background music of your choice.

**Playlist:** Display the playlist on the screen.

**Info:** Display the information of the text file.

# Recording Operation

## PVR Settings

PVR File System: Press the MENU button and select EXTRAS menu, choose PVR File System and press OK.



**Select Disc:** Select the USB device to record on.

**Check PVR File System:** Check the system of the USB device

**USB Disc:** Displays information

**Format:** Format the USB device for PVR operating

**Time Shift Size:** Displays the memory size of the USB device

**Speed:** Displays the speed of the USB device

## Recorded List

Press the USB1 button on the remote control to display the recorded list



Note: Delete any scheduled recordings out of this list with the RED button.

## Schedule List

Press the A button on the remote control to display the recorder schedule list



Note: Delete any scheduled recordings out of this list with the RED button

## Timer Record

When selecting a programme in the EPG for Timer record the Recorder menu will appear. Press OK and the Timer will set automatically from the EPG data. If you choose to manually programme the Recorder menu you can.



**Channel:** Select the channel you want to record

**Mode:** Select the recording mode

**Start time:** Select the record time begin

**End time:** Select the record time end

 
Press the OK button to save and exit the menu

## Recording

### Record and Time shift function buttons

When you press the **R** Rec button the navigation menu will display on screen.

**Note:** Display and exit the navigation menu by pressing the **R** button. While you are recording you can press the play button and watch what has already been recorded.



**Recording:** Press **R** to start instant recording

**Pause:** Press **|▶** to activate the time shift function and pause live TV.

**Stop:** Press button **■** to stop the recording or the time shift process.

**Remote Control button USB1:** Displays the recorded List


**Remote Control button A:** Displays the Recording Schedule List

### Time shift

 When you press the EXIT/ REC button the navigation menu will display on screen.

**Note:** Display and exit the navigation menu by pressing the EXIT button. While you are recording you can press the play button and watch what has already been recorded.

When you press the **|▶** Pause/Play button the picture will be paused and the navigation menu will be displayed on screen



While you are doing a time shift recording you can press the play button and watch what has already been recorded

## EPG Recording

Display the programme guide by pressing the GUIDE button

Select a programme to record by navigating through the EPG with the **▲▼◀▶** buttons.



**Record:** Press the RED button to display the recorder menu and set the timer record. When the programme starts it will be recorded to the USB device.

**Schedule:** Press YELLOW button to display the recording Schedule List

**Remind:** Press GREEN button to display the remind menu. Once the programme starts the TV will automatically switch to this programme.

# DVD Operation

## Basic Operation

Press the Power button on the TV or the remote control, and select "DVD" source by the TV/AV[SOURCE]. If there is no disc in the DVD player the screen will show "NO DISC". Insert Disc according to picture next to disc slot. Do not touch the playing surface. Hold the disc around the outside with your fingers and place the disc into the slot. The player will automatically draw the disc into the player. To "Eject" the disc, press the EJECT button on the TV or the "▲" button on the remote control.

## DVD Setup MENU

- DVD Setup is a menu to enable the user to configure the DVD settings.

### Enter the DVD Setup menu

Press the Menu button on the remote control and select the OPTIONS MENU. Scroll down and select DVD Setup. When in the DVD setup menu use the ◀▶ button to navigate along the top of the menu and the ▲▼ to scroll up and down the menus.



### Exit the DVD Setup menu

In the General setup page options scroll down to Exit setup and press OK.

## General Setup

### TV Display

#### 4:3 Pan Scan


This is selected when the DVD player is connected to a normal TV. Wide-screen images are shown on the screen, but with some parts cut automatically.

#### 4:3 Letter Box

This is selected when the player is connected to a normal TV. Wide-screen images are shown on the screen, with black belt on the top and bottom.

#### Wide

This is selected when the player is connected to a wide-screen TV.

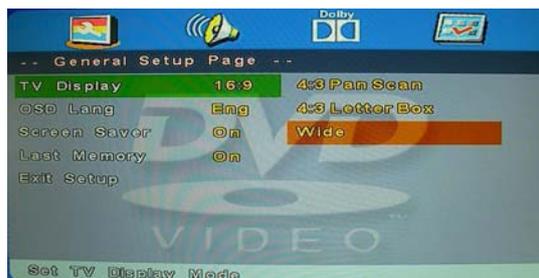

### OSD Language

This is used to select the OSD language



### Screen Saver

Start the screen saver, the screen saver image will appear when the player stops or the picture is paused for a few minutes. This saver can keep the screen from being damaged.

- On (Start the screen saver)
- Off (Turn off the screen saver)



### Last Memory

This is setting enables you to watch the DVD from the last point it was turned off, (for example changing the source to watch TV)

- ON (Activate the last memory function)
- OFF (Deactivate the last memory function)


NE



## AUDIO Setup

### • Speaker Setup

Enter the Audio setup page using ▼ button, press ok see the options.

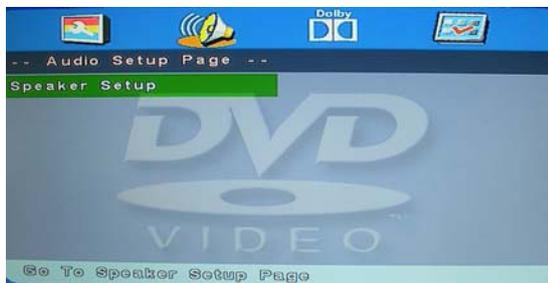

### Downmix

#### • LT/RT

A disc recorded multi channel soundtrack, the output signal will be incorporated to left and right channel.

#### • Stereo

A disc recorded multi channel soundtrack, The output signal will be incorporated to stereo.



## Dolby Digital Setup

### Dynamic

This option is used to set the compression ratio in order to control the sound (Volume) contrast.



## Preference Setup



This menu is only available when in DVD mode and no DVD is playing or the DVD has been stopped.

### TV Type

#### PAL

This is selected when the player is connected to a PAL system TV.

#### MULTI

The player will set the TV system according to the disc in the tray.

#### NTSC

This is selected when the player is connected to a NTSC system TV.

### Audio

Choose the language you want to watch your DVD in. Only if the language is recorded to the DVD will this option be functional.



### Subtitle

Choose the subtitle language you want to watch. Only if subtitles have been recorded to the DVD will this option be functional.



### Disc Menu

Choose the language you want to see the Disc menu in. Only if the language is recorded to the DVD will this option be functional.



## Parental

Parental lock gives you the option of selecting an age control grade. For example if PG is selected any disc inserted rated higher will not be played.

- KID SAFE
- G
- PG
- PG 13
- PGR
- R
- NC 17
- ADULT



## Password

The password is a tool to lock and unlock the parental Lock setting.

Note: (Default password is 123456)



## Default

To set the DVD settings back to factory default, choose reset and press the OK button.



## Disc Care

### About Disc Terms

#### Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

#### Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching, but some discs may not have a recording chapter.

#### Track

A segment of picture or music on a CD, Each track is numbered for searching.

#### Care of Disc

Video disc contains high-density compressed data that needs proper handling.

1. Hold the disc with fingers by outer edge and/or the center spindle hole. Do not touch the discs surface.
2. Do not bend or press the disc.



3. Do not expose the disc to direct sunlight or heating sources, Store discs in cabinet vertically and in dry condition.

Prevent exposure to:

Direct sunlight

Heat or exhaust from a heating device

Extreme humidity

Clean the disc surface with a soft, dry cleaning cloth, Wipe the disc surface gently and radially from center toward the outer edge.

Do not apply thinner, alcohol, chemical solvent, or sprays when cleaning. Such cleaning fluids will permanently damage the disc surface.

## TROUBLE SHOOTING GUIDE

To assist in locating possible faults use the help guide below.

SYMPTOM	SOLUTION
No Picture	Check that the TV is correctly plugged in. Check that the TV is connected to a suitable power source. Check the electrical supply is turned on.
No Picture	Ensure that the TV is powered on. Check that the cables are fitted securely. Ensure the aerial and/or external sources are connected. Press the SOURCE button to change the source. Turn the TV on or off.
No Sound	Press the MUTE button and check if Mute mode is set. Switch to another channel and see if the same problem occurs. Press V+ button to see if the problem can be solved.
No picture on some channels	Check that correct channel is selected. Adjust the antenna.
No colour on some channels (black & white)	Check if the same problem exists on other channels. Ensure the correct picture settings are selected.
Noisy, Snowy, Ghosting picture.	Check the antenna is connected correctly. Check that the antenna is in good condition. Try moving the antenna.
Will not accept disc	DVD not selected. Select DVD mode with SOURCE button.
Screen shows "NO DISC"	Disc placed incorrectly. Disc must have mirror side facing you if single side.
	Disc damaged or dirty. Inspect disc. If damaged you must discard. If dirty see "Disc care" page.
Picture "Freezes" or breaks up	Disc damaged or dirty, See "Disc care" page
Certain disc functions not working.	Disc may not support required feature. Read disc information.

If none of the suggestions seem to work, try switching your TV off and then on again. If this does not work contact our technical helpline.

NOTE: The TV must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV has dangerous voltages inside that may cause fatality or fire.



DVD-Signal: NTSC, PAL (Regionalcode 2)



**Caution:**

This unit is a class 1 laser product. However this unit uses a visible laser beam which could cause hazardous radiation exposure if directed. Be sure to operate the player correctly as instructed.

## TECHNICAL SPECIFICATIONS

Specifications of the TV that you have just purchased may vary from the information in this table due to technical innovations.

### TV Specifications

TV System	PAL/BG/DK/ I	PAL/BG/DK/ I	PAL/BG/DK/ I
Audio System	BG/DK/I	BG/DK/I	BG/DK/I
Screen size	19" (Diagonal)	22" (Diagonal)	24" (Diagonal)
Resolution	1366 x 768 Pixels (RGB)	1920 x 1080 Pixels (RGB)	1920 x 1080 Pixels (RGB)
Aerial input	75 Ohm (unbalanced)	75 Ohm (unbalanced)	75 Ohm (unbalanced)
Audio output power	2 x 3W	2 x 3W	2 x 3W
Power requirements	12V  3A	12V  3A	12V  4A
Power consumption	34W	36W	43W
Standby power consumption	<0.5W	<0.5W	<0.5W
Weight	3.6kg	4.2kg	5.6kg


## Remote control specifications

Type	Infrared
Control distance	5m
Control angle	30 degrees (Horizontal)
Batteries	2 x 1.5V, Size AAA
Dimensions	48 x 193 x 20mm
Weight	120g (without batteries)

## Wall Mounting

1. The stand base and stand stem must be removed.
2. Please follow the instructions of how to apply the stand (included in the gift box), if you have already attached the TV stand read the instructions in reverse order to detach.
3. Be sure the stand stem is removed (unscrew 4 screws at the stem).
4. Use four machine screws to mount the TV on the bracket.

This unit is VESA-Compliant and designed to be wall mounted with a VESA-Compliant 100mm x 100 mm mounting kit. Mount this unit according to the instructions of the wall bracket (not supplied)

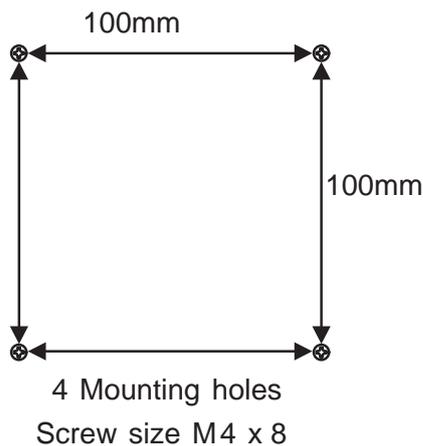

## Waste Electrical Recycling

### Correct disposal of Product

This sign indicates that this product may not be disposed of with your regular household waste. The recycling and separate collection of such products is your responsibility. Please drop off the above mentioned waste at a designated place for recycling waste electrical and electronic equipment. If you do not know where to drop off your waste equipment for recycling, please contact your local city office or household waste collection service.



The crossed out wheeled dust bin symbol indicates that batteries and /or accumulators must be collected and disposed of separately from household waste.

**Hg Cd Pb**



**Pb**

If the battery or accumulator contains more than the specified values of lead (Pb), mercury (Hg), and/or cadmium (Cd) defined in the Battery Directive (2006/66/EC), then the chemicals Hg Cd Pb symbols for lead (Pb), mercury (Hg) and/or cadmium (Cd) will appear below the crossed out wheeled dust bin symbol.

By participating in separate collection of batteries, you will help to assure the proper disposal of products and batteries thus help to prevent potential negative consequences for the environment and human health.

For more detailed information about the collection and recycling programmes available in your country, please contact your local city office or the shop where you purchased this product.



This appliance complies with European Safety and Electrical directives.

It fulfills the following EU regulations:

En55013:2001+A1:2003+A2:2006

EN55020 2007

EN61000-3-22006 EN61000-3-3:1995+A1:2001+A2:2005

EN55022:2006(CLASS-A)

EN55024:1998+A1:2001+A2:2003